


uCharger™ with Samsung Galaxy S2

AC Adapter (TomTom 5V@1A max)

(1) AC Mode, (2) **643mA**@72% battery level

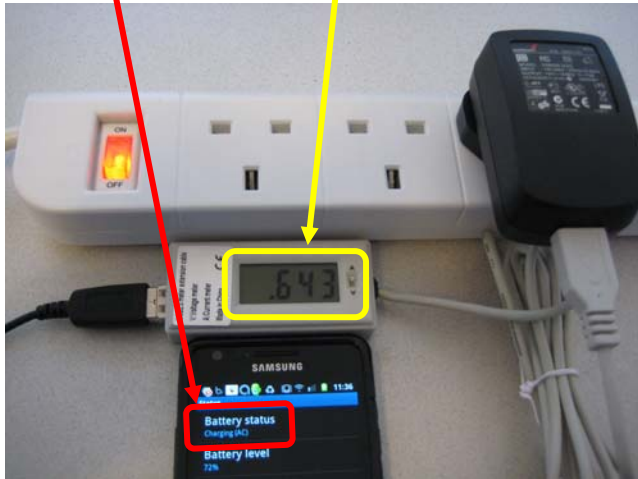

"Fast Charging"

(1) Battery Charging Mode

(2) Charging Current

* Toshiba Satellite Pro U400


* USB Port Tester (up to 2A)

USB Cable with uCharger™ Connected

(1) **AC Mode**, (2) **643mA**@73% battery level


=> "Same charging current of AC Adapter"

AC mode Charging

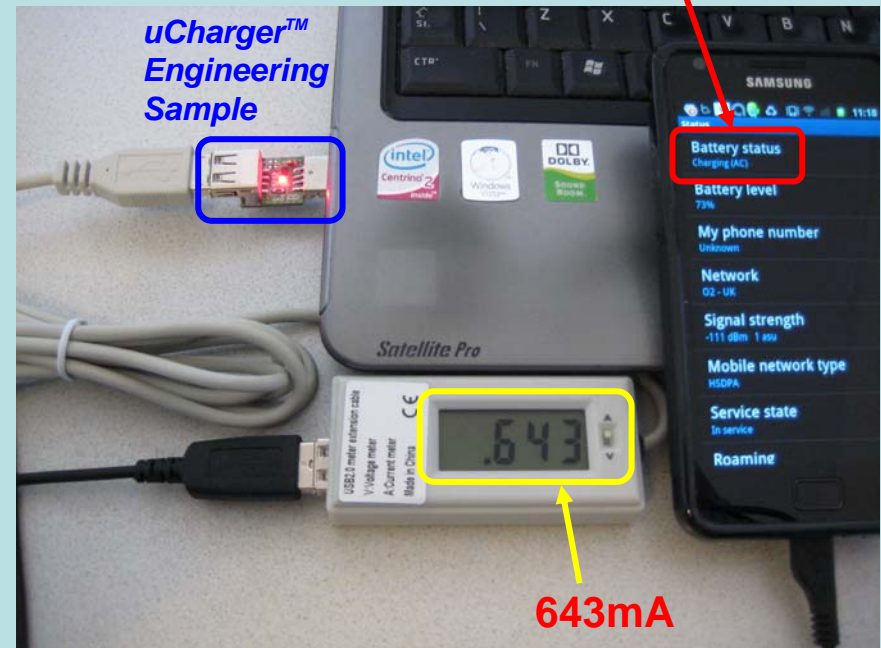

USB Cable only

(1) USB Mode, (2) **401mA**@73% battery level

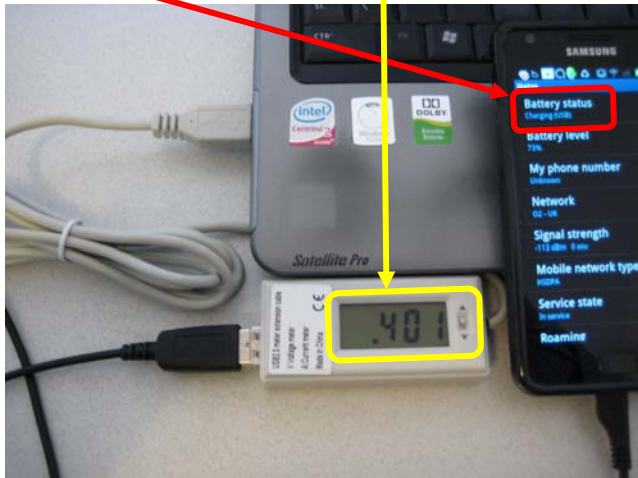


uCharger™ with Samsung Galaxy S2



USB Cable with uCharger™ Connected



AC mode
Charging

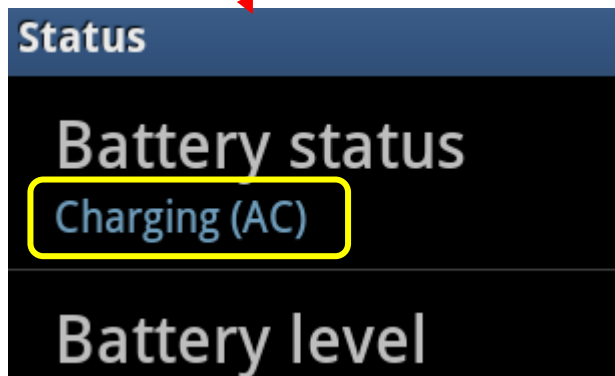

USB Cable only

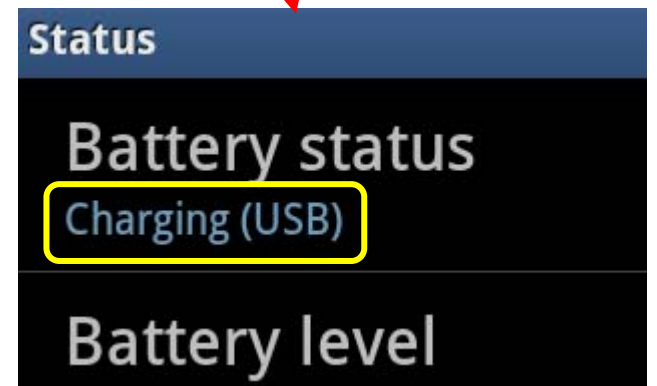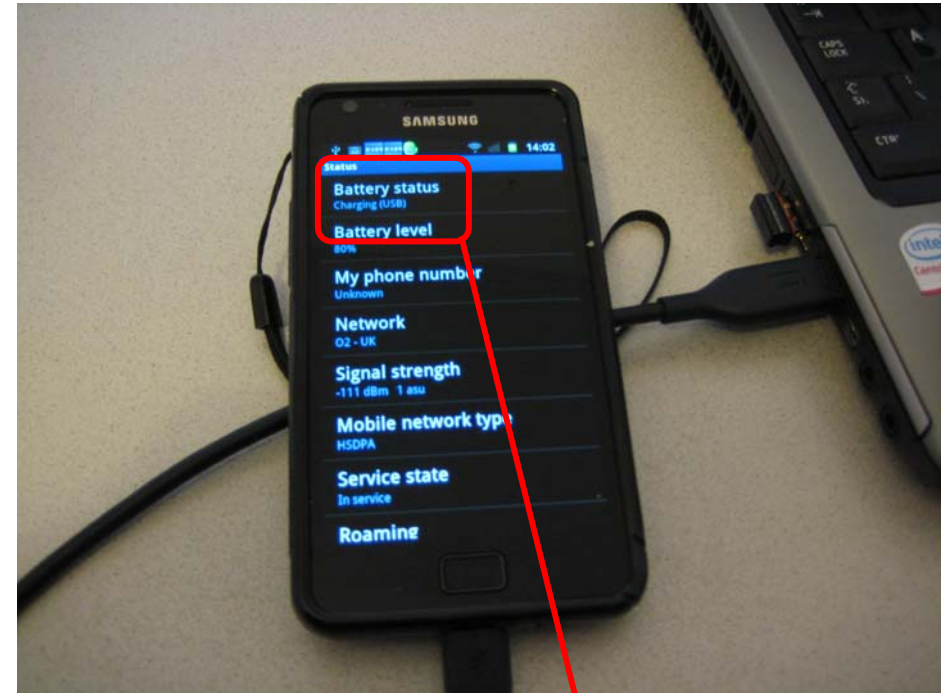

uCharger™ with Apple iPad 2


AC Adapter (5V@2.1A max)

(1) AC Mode, (2) 1139mA



USB Cable only (no charging)

(1) USB Mode, (2) 485mA

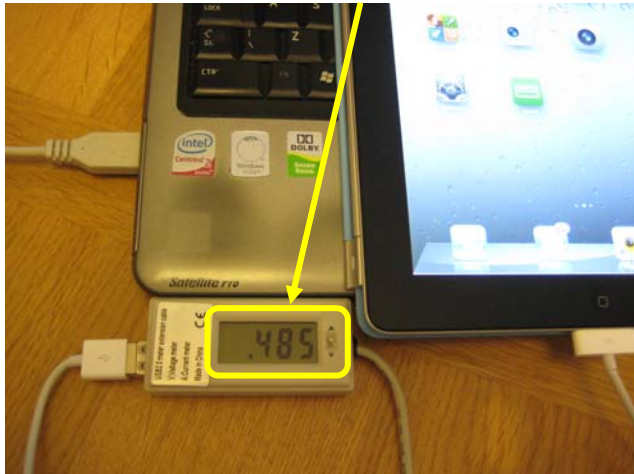

Charging

(1) Battery Charging Mode

(2) Charging Current

* Toshiba Satellite Pro U400

* USB Port Tester (up to 2A)

USB Cable with uCharger™ Connected

(1) AC Mode, (2) 938mA

=> "Enough charging current"

